





Materials

- A1 liquid 
- A1 powder 
- Thix A
- C-veil
- ATP powder

Tools


- scale
- cups
- drilling machine with mixer
- brush
- spatula
- squeegee
- sponge
- sanding paper
- water



Option 1. Smooth finish with Thix A using a spatula or squeegee



1 How to create a smooth finish on your object.

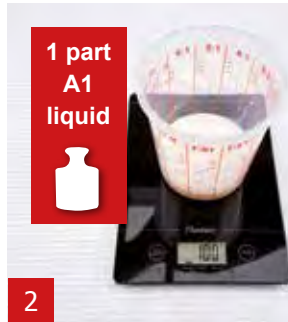

2 Weigh 1 part of A1 liquid. In this example we use 100 g A1 liquid.



3 Weigh 2 parts of A1 powder. In this example we use 200 g A1 powder.



4 Add 2% Thix A (of the total quantity) to the A1 liquid (in this example we use 6 g).



5 Gently add the A1 powder to the A1 liquid. Stir the mixer till all lumps have disappeared (\pm 1 min.) resulting in a smooth material.



6 This A has been added to the A1 to get a thick texture, which can be formed and sanded.



7 This mixture can be applied with a brush or roller.



8 For a more smooth finish you can use a spatula or...



9 ...a squeegee.



10 Resulting in a smooth finish.

Option 2. Smooth finish with Thix A using a sponge, sanding paper or machine



11 For an even more smooth finish you can use (after \pm 20 minutes) a damp sponge or a waterproof sanding pad.



12 Or by using sanding paper manually or by machine.




13 Resulting in an even more smooth finish.

Option 3. Smooth finish with C-veil



14

How to create a smooth finish on your object.

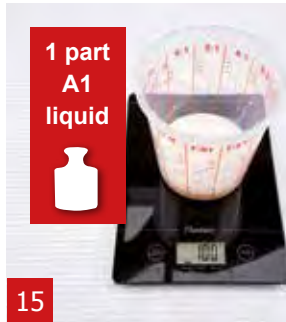

15

Weigh 1 part of A1 liquid. In this example we use 100 g A1 liquid.



16

Weigh 2 parts of A1 powder. In this example we use 200 g A1 powder.



17

C-veil.



18

Gently add the A1 powder to the A1 liquid. Stir the mixer till all lumps have disappeared (\pm 1 min.) resulting in a smooth material.



19

Tear off a piece of C-veil (use gloves).



20

Apply a thin layer of A1 on the surface.



21

Press the small pieces of C-veil into the A1. Overlay the pieces of C-veil.



22

The C-veil must be covered with a layer of A1 by hand or brush.



23


For a more smooth finish you can add a second layer of C-veil.

Option 4. Smooth finish with ATP powder




24

How to create a smooth finish on your object.

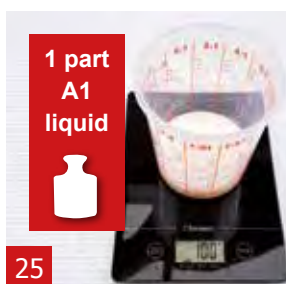

25

Weigh 1 part of A1 liquid. In this example we used 100 g A1 liquid.

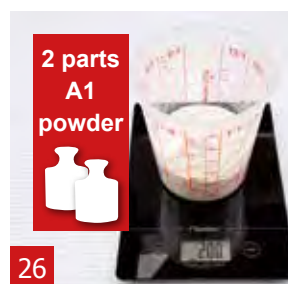

26

Weigh 2 parts of A1 powder. In this example we used 200 g A1 powder.



27

In this example we use ATP powder.



28 Gently add the A1 powder to the A1 liquid. Stir the mixer till all lumps have disappeared (± 1 min.) resulting in a smooth material.



29 Add as much ATP powder as needed into the A1. Stir firmly till all lumps have disappeared.



30 The A1 texture can be made as a paste or as a putty.



31 The A1 'paste or putty' can be applied on an object with a spatula.



32 Resulting in a smooth finish. For an even more smooth finish (after ± 20 min.) use the sanding techniques (see option 2; nr. 11-12-13).

Note:

ATP powder is **NOT** suitable for A1 objects placed outdoors.



ACTIVE COMPOSITE TECHNOLOGIES

Nijverheidsweg 15A | 3251 LP Stellendam | The Netherlands
 T: +31-187-663006 | M: +31-6-51612714 | Email: info@activecomposite.com