



# Manual



## Disclaimer

The information in this user manual is considered accurate. It is however not possible to derive any rights from the information with regard to its accuracy, the achieved results by using the product, nor that the use of the product would breach a patent.

The user needs to ascertain the suitability of the product for the application the user wishes to apply. When in doubt, the user needs to carry out tests to ascertain the suitability of the product.

The technical data sheet of any A1 (Acrylic One) product is available upon request and must be read and understood before use.

1<sup>st</sup> edition - 2019

This will expire our previous publications.

## Made by:

Leony Lambregts  
Milena van Roon  
Marina Prodel  
Harold van Zutphen, Coen van Veen

## Technical data

Mixing ratio (1:2)	1 part A1 Liquid 2 parts A1 Powder
Colour	creamy white (*1)
Density (wet)	1.75 kg / dm <sup>3</sup>
Density (dry)	1.66 kg / dm <sup>3</sup>
Processing time	20 - 25 minutes
Demoulding time	approx. 1 hour
Hardness	85° Shore D
Expansion during hardening	0.1 - 0.6% (*2)

\*1) The colour of A1 can vary slightly with every production batch.  
\*2) An additive is available to reduce expansion.

# INDEX

1.	<b>A1 (ACRYLIC ONE)</b> - MAIN APPLICATION AREAS - PROPERTIES - SURFACE FINISHES - DESIGN - ONE OFF'S - MAINTENANCE	4
2.	<b>WEIGHING AND MIXING OF A1</b> - PROCESSING TIME - SETTLING TIME - COLOUR - TOOL CLEANING - SETTLING TANK - CALCULATION OF A1 NEEDED - INSTRUCTION WEIGHING AND MIXING OF A1	6
3.	<b>ADDITIVES</b> - A1 RETARDER - A1 ACCELERATOR - A1 THIX A - A1 THIX B - A1 DILUENT - A1 ATP POWDER - THICKENING A1 WITH A1 THIX A - MAKE YOUR OWN WALL FILLER WITH A1 ATP POWDER - ADDING A1 RETARDER - GELCOAT	8
4.	<b>A1 FIBRE REINFORCEMENT</b> - A1 TRIAXIAL GLASS FIBRE 160 GR/M <sup>3</sup> - A1 TRIAXIAL BASALT FIBRE 160 GR/M <sup>3</sup> - CSM 150 GR/M <sup>3</sup> - C-VEIL 27 GR/M <sup>3</sup> - USE OF NATURAL FIBRES - EXAMPLES LAMINATE BUILD UP VS. THICKNESS - HOW DO YOU PROCESS A1 TRIAXIAL FIBRE? - DESIGN VALUES FOR MECHANICAL PROPERTIES	10
5.	<b>PIGMENTING OF A1</b> - ASSORTMENT - CONSTANT COLOUR - FROM IVORY WHITE TO WHITE - UV EXPOSURE - CONCRETE LOOK	12
6.	<b>FILLERS</b> - WHICH FILLERS CAN I USE TO REDUCE COSTS? - ADDING FILLERS TO THE A1 - EXAMPLES MATERIALS MIXED IN A1	14
7.	<b>PROCESSING METHODS</b> - CASTING - ROTATIONAL MOULDING - BRUSH, ROLLER OR SPATULA - SPRAYING	16
8.	<b>MOULDS</b>	18
9.	<b>LAMINATING IN A MOULD</b> - TEMPERATURE AND HUMIDITY	19
10.	<b>LAMINATING OF AN OBJECT</b> - EPS GLUED WITH A1 - EPS COATED WITH A LAYER OF A1 - EPS COATED WITH A LAYER OF A1, REINFORCED WITH A1 TRIAXIAL FIBRE - PUR/PIR FOAM - SAWING THROUGH A FORM - EXAMPLES AMOUNT MATERIAL (MM/M <sup>2</sup> )	20
11.	<b>SUPPORT MOULDS</b>	22
12.	<b>SMOOTH FINISH OF A1</b> - A1 THIX A - A1 ATP POWDER - C-VEIL - INSTRUCTION SMOOTH FINISH	24
13.	<b>METAL POWDERS</b> - TIPS	26
14.	<b>A1 IN AN OUTDOOR ENVIRONMENT</b> - FIRE - UV - WATER	28
15.	<b>REINFORCEMENT STRUCTURE</b>	30
16.	<b>A1 SEALER</b> - DATA - APPLICATION OF A1 SEALER (PLUS) - PATINATE WITH A1 SEALER (PLUS) - WATERPROOF - CHECK FOR DAMAGES	32
17.	<b>COATINGS (FOR OUTDOOR USE)</b> - A1 SEALER (PLUS) - EXTERIOR WALL PAINTS - 2K POLYURETHANE COATINGS - ACRYLIC PAINT, OIL PAINT OR LACQUER	34
18.	<b>A1 FAÇADES</b> - APPEARANCE - PROCESSING - FREEDOM OF FORM - LIGHTWEIGHT - RENOVATIONS - SUBSTITUTE FOR NATURAL STONE AND BRICK - SUBSTITUTE FOR CONCRETE - SUBSTITUTE FOR WOOD - SUBSTITUTE FOR METAL	35
19.	<b>TO GET STARTED</b> - A1 EXTENDED STARTER KIT - WORKSHOPS - WEBSHOP / WEBSITE / FACEBOOK - QUESTIONS	36
	<b>NOTES</b>	37
	<b>GENERAL COMBINED SALES AND DELIVERY TERMS AND CONDITIONS NS B.V.</b>	39



# 1. A1 (ACRYLIC ONE)

A1, the abbreviation for Acrylic One, is a two-component material consisting of a mineral powder and a water-borne acrylic resin. These connect in such a way that a strong material is created. A1 has many unique properties. These contribute to its strength, durability, weight to strength ratio, non-toxic, easy to manufacture and its ability to comply with many of the necessary test requirements of the construction industry, specifically those in regard to performance to fire and performance under impact.

A1 has a low toxicity both in its component parts and in its manufacturing process. Its potential use is wide-ranging and could effectively replace much GRG, GRC and GRP in many of the situations where those materials are now used, both in- and outdoor. In comparison with GRC, A1 offers much greater versatility, as a panellised cladding system in that the manufacturing tolerance can be much tighter. A1 possesses a high resistance to ultra-violet degradation. It can, therefore, be used in the situation where other materials would suffer.

## Main application areas

- Architecture & Façade panels,
- Art & Sculptures
- Decor construction & Thematization

## Properties

- Very high fire resistance properties
- UV stabilised
- Rainwater resistant (if sealed)
- Good mechanical properties
- Low heat generation (max 45 °C)
- Shrink free
- Solvent-free
- Environmentally friendly

## Surface finishes

A1 should be viewed as a matrix in which a variety of filler materials can be incorporated, either to enhance mechanical performance or for the sake of appearance. It is possible for A1 to include any non-reactive filler up to, and in some cases exceeding 200%. This allows a great deal of freedom when deciding upon encast and ex-mould finishes.

An extensive and impressive range of finishes has been produced. These include a variety of metals (bronze, brass, copper and stainless steel), pigmented materials imitating terracotta, brick and pottery and encast stone finishes from white marble through to dark granite, Portland and Bath stone. It is thus possible to create a finish to meet the designer's specification rather than, as is usual, the designer having only two or three established finishes from which to make a choice.


The standard finishes that can be produced are extremely high, both in their resemblance to the materials that they are imitating and in the quality of the surface finish.

A wide variety of finishes can either be incorporated into the material as a facing in the mould, where this is going to be backed up by a lamination or other composite foam material, or they can be included in the mix if the material is being used as solid cast. The method of manufacture obviously varies from situation to situation depending upon the design.

A range of fine textures and colours can be further produced. These include leather and cloth through this specialised process.

## Design

A1's excellent weight-to-strength ratio means that when used as a lamination the designer is allowed greater freedom to produce large panels incorporating, if required, complex and fine details. When this is considered in combination with the ease of fixing and calculation of load, A1 can be seen as

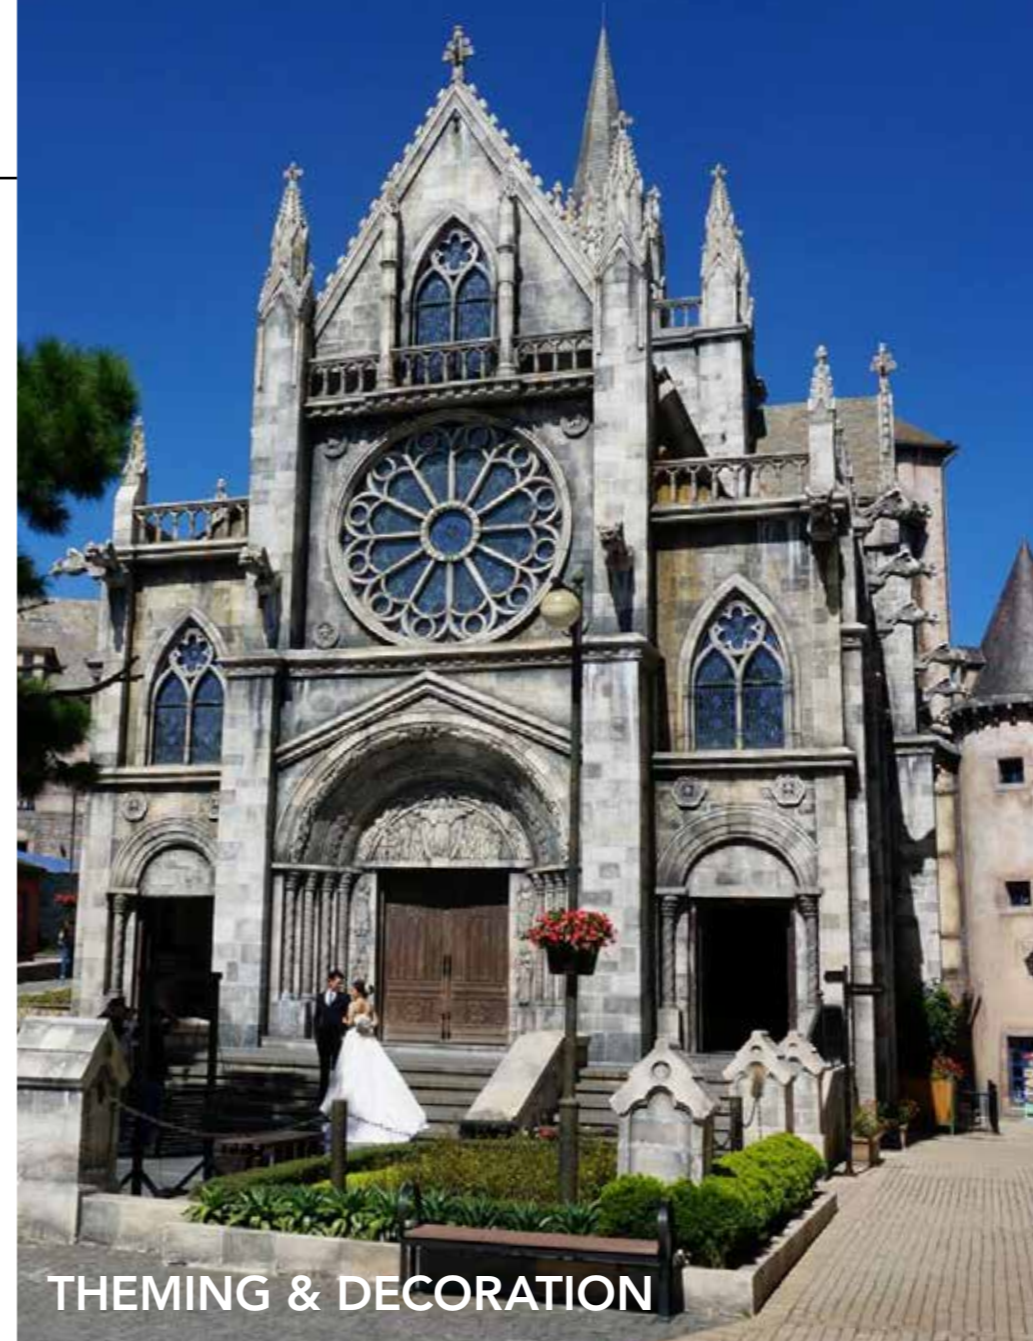

can be treated post-mould with an anti-graffiti coating which allows for the removal of paint, crayons, pens, etc. In normal maintenance conditions, the material can be simply washed with detergents and water or, if required, with stronger substances such as solvents, with no detriment to the surface finish.

In this brochure you will find information about working with A1, available additives and fillers.



a major step forward in pushing back the boundaries of design limitation.

## One-offs

Special or 'one-off' units can be easily produced alongside standard run and if site tolerances have not been strictly observed the panels can be 'humoured' to fit and made good on site. Of great significance is the material's high strength to weight ratio, which allows much lighter fixing systems and sub-grids.

All these attributes contribute towards further potential savings having started with a material, which has already cost advantages over alternatives.

## Maintenance

The surface finish of A1 is extremely durable and will withstand aggressive use. For public areas, the material



## 2. WEIGHING AND MIXING OF A1

A1 is a combination of A1 Powder and A1 Liquid in the mixing ratio: 1 part A1 Liquid and 2 parts A1 Powder (1:2). This is always based on weight.

Mixing can be done with a spatula (small quantities) or with a High Shear mixer. First, start stirring the A1 Liquid and gradually add the A1 Powder.

The A1 is ready when any lumps have disappeared. Mixing takes about 1 minute. Try to mix with as few air bubbles as possible in the A1 by keeping the mixer head under the surface.

### Processing time

After mixing, the standard processing time is 20 - 25 minutes. If a shorter or longer processing time is required, A1 additives can be added.

### Settling time

A1 is a water-borne product. Residual moisture must evaporate to obtain the final properties. The time required for this is highly dependent on external factors such as the size of the object, temperature and humidity. If the object is laminated or cast in a mould, it can already be removed from the mould as soon as the strength is sufficient to withstand the forces that occur during this process. The product can then reach the optimal strength outside the mould.

### Colour

Without fillers or colourants A1 has the appearance of cream-white coloured stone, with the hardness of plastic, about 80 shore D.

### Tool cleaning

Skin and hands can be washed with soap and water. Tools can be cleaned with water



### Settling tank

The settling process also continues under water, which is why we recommend removing the tools from water immediately after cleaning. Use a separate bowl of water to clean tools and hands where you can let the A1 sink (minimum 24 hours). After 24 hours, surface water can pass through the sink. The A1 sediment can be left to dry, be disposed of with the residual waste or be reduced and processed as filler (max 1/3).

### Calculation of A1 needed

When applying 1 layer of A1 of 1 mm thickness you will use 1.75 kg A1 per m<sup>2</sup> (1 liter A1 = 1.75 kg).

In a mould you normally work with a first layer of 2 mm. Next, we advise to use 3 layers of A1 Triaxial fibre. In order to achieve this will have to apply 4 layers of A1 of 1 mm. Normally in a mould we thicken A1 for the first layer with Thix A. Make sure this layer is hardened before applying the next layers to avoid print through of the A1 Triaxial fibre. Use 1 layer of A1 between your hardened first layer and the first layer of A1 Triaxial fibre in order to make a proper bonding.

### As an example needed for a project of 5 m<sup>2</sup>:

- 2 mm 1<sup>st</sup> layer
- 4 layers of 1 mm A1 in order to apply the 3 layers of A1 Triaxial fibre

Total 6 mm of A1 x 1.75 kg per layer x 5m<sup>2</sup> is 52,5 kg of A1, consisting of 17.5 kg A1 Liquid and 35 kg A1 Powder.

Be aware that this is an indication and not a general rule.



1 Set up A1 Liquid and A1 Powder.



2 Set up a scale for weighing A1 Liquid and A1 Powder.



3 Set up (plastic) cups for mixing the materials (A1 Liquid, A1 Powder).



4 Use the A1 mixer. Small: up to 1.5 kg of A1. Large: 1.5 kg or more A1.




5 Choose the appropriate mixing machine.



6 Fill a cup with water for cleaning the mixer.



7 Place a cup on the scale. Calibrate the scale together with the cup (0.0 g).

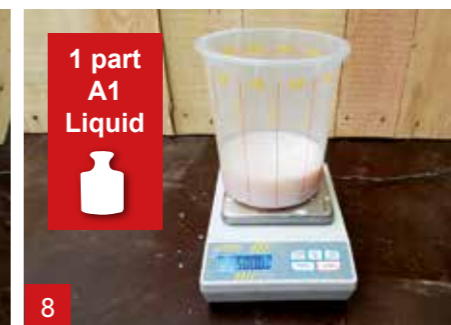

8 Weigh 1 part of A1 Liquid. In this example we use 500 g A1 Liquid.



9 Weigh 2 parts of A1 Powder. In this example we use 1000 g A1 Powder.



10 Put the mixer (skew) in the A1 Liquid cup and create a swirl.



11 Gently add the A1 Powder to the A1 Liquid.



12 Stir the mixer till all lumps have disappeared (± 1 min.) resulting in a smooth material.



13 A1 is ready for use when all lumps have disappeared.



14 Clean the mixer with water!



15 A1 is ready for laminating, casting or spraying. Processing time 20 - 25 minutes.

# 3. ADDITIVES

To optimise the processing of A1, additives are available, which can extend or shorten the processing time, or thicken or dilute A1.

**A1 Retarder** can be used to extend the processing time. Always add the A1 Retarder to the A1 Liquid. Add a **maximum of 2% of A1 Retarder** to the total weight.

**A1 Accelerator** can be used to extend the processing time. Always add the A1 Accelerator to the A1 Liquid. A1 Accelerator can also be used to correct any delaying effects of some pigments and fillers. Add a **maximum of 1% of A1 Retarder** to the total weight.

**A1 Thix A** is an additive to thicken the product into a gel. This thixotropy agent is used to make gelcoats and to manufacture vertical or overhanging parts. Add the A1 Thix A to the created A1 until the desired thickness (viscosity) is reached. The **maximum percentage A1 Thix A** you can add is **2%**. Adding more eliminates the effect again.



A1 Retarder - Add a maximum 2% of A1 Retarder to the total weight.



A1 Accelerator - Add a maximum of 1% of A1 Accelerator to the total.



A1 Thix A - When adding 2% to the total weight, the maximum achievable thickness is reached.

**A1 Thix B** is an additive to thicken the product into a gel. Add A1 Thix B drop by drop to the A1 mixture until the correct thickness is reached.

Due to the reduced water resistance of A1 when using A1 Thix B, we recommend not to use this product if the object is exposed to an outdoor environment.

**A1 Diluent** lowers the viscosity of A1. This can be used to cast complicated products. A1 Diluent can also be used to use more fillers. A1 Diluent may affect the processing time.

Use a **maximum of 5% A1 Diluent** relative to the total weight.

**A1 ATP Powder** is a volume thickener. This allows the A1 to be thickened to filler thickness. This thickened A1 can be used to finish an object and apply a smooth surface. We recommend using A1 ATP Powder exclusively for indoor applications.



A1 Thix B



A1 Diluent



A1 ATP Powder

## Thickening A1 with A1 Thix A

When working in the mould, the 1<sup>st</sup> layer of A1 is important, as this is ultimately the visible layer. We recommend thickening the 1<sup>st</sup> layer of A1 with A1 Thixotrope A (Thix A).

With the A1 Thix A you can turn the A1 into a beautiful pasta. Because of the thickening, the A1 stays in place, even when working in a mould with vertical parts. It is also possible to apply a pigment, metal powder or dried sand to the 1<sup>st</sup> layer.

Add the A1 Thix A to the created A1 until the desired thickness (viscosity) is reached. The maximum percentage A1 Thix A you can add is 2%. Adding more eliminates the effect again.



## Create your own wall filler with A1 ATP Powder

You can make your own wall hole filler by adding A1 ATP Powder to the A1. First mix the A1 Liquid and the A1 Powder together. Then add A1 ATP Powder as needed to get a firm paste.

With the help of a putty knife, holes can be easily sealed.



## Adding A1 Retarder

The standard processing time of A1 is between 20 and 25 minutes. If desired, it is possible to extend this processing time. We recommend a processing time of max 1 hour.

As a rule of thumb, you should add 0,3% A1 Retarder to the total A1 weight of the mixed A1 for 20 minutes extra

processing time. This is 3 gram per kg A1 for 20 minutes extra processing time. This time also depends on the A1 Powder and can deviate. That is why we advise you to perform a small test beforehand.

We recommend that the A1 Retarder is first added to the A1 Liquid before it is mixed with A1 Powder.

## Gelcoat

When working with A1 a gelcoat is used regularly.

This gelcoat can be made in the following way:

- Mix the A1 Liquid with the A1 Powder until a smooth mixture is obtained.

- Add to the A1, if desired, pigment in the right colour and/or other materials such as dried sand and metal powders.

- Add A1 Thix A until the desired thickness (viscosity) is reached. The maximum percentage of A1 Thix A you can add is 2%. Adding more

will eliminate the effect.

- Apply the gelcoat to the mould with a brush, for example. Keep a layer thickness of at least 1 mm.

- After gelling of the gelcoat (20 - 25 minutes) we advise to continue working within 1 hour to keep the adhesion optimal.


# 4. A1 FIBRE REINFORCEMENT



A1 Triaxial glass fibre 160 gr/m<sup>2</sup>



A1 Triaxial basalt fibre 160 gr/m<sup>2</sup>

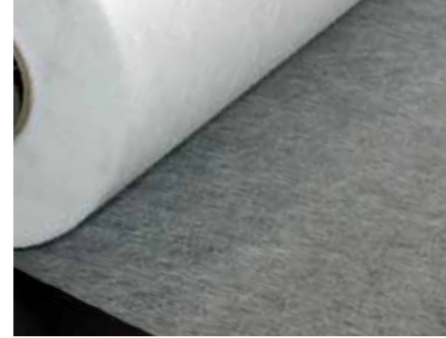

C-veil 27 gr/m<sup>2</sup> (for a smooth surface)

## A1 Triaxial glass fibre 160 gr/m<sup>2</sup>

A1 Triaxial glass fibre is used in combination with A1. In this way, A1 objects can be created or covered in moulds with A1. Triaxial glass fibre strengthens the A1 objects.

- A1 Triaxial glass fibre has an open structure and has been specially developed for A1.
- It is flexible, making it easy to drapable, even over round shapes.
- Lightweight (160 gr/m<sup>2</sup>) yet very strong.
- After use of 4 layers in combination with A1 vandalism proof.

## A1 Triaxial basalt fibre 160 gr/m<sup>2</sup>

A1 Triaxial basalt fibre can be used as fibre reinforcement. Although the A1 Triaxial glass fibre causes little irrigation, it is a good alternative for people who are sensitive to working with glass fibres.



CSM 150 gr/m<sup>2</sup>

## CSM 150 gr/m<sup>2</sup>

There are also good experiences with the use of CSM 150 gr/m<sup>2</sup> as this has a relatively open structure.

## C-veil 27 gr/m<sup>2</sup>

C-veil glass is a thin glass fleece that is mainly used as a (smooth) finishing layer. It contributes little to improving strength.

### Use of natural fibres

Natural fibres are offered as an alternative to glass and basalt fabrics. A major disadvantage of these fibres is the tendency to absorb and retain moisture, which disturbs the moisture balance in the A1. This moisture absorption can also cause fungi to develop and eventually affect the A1 object. For outdoor applications, the use of natural fibres is therefore not recommended.

## Examples laminate build up vs. thickness

Thickness	A1 Triaxial glass fibre	A1 Triaxial basalt fibre	C-veil	CSM
1 mm	gelcoat	gelcoat	gelcoat	gelcoat
2 mm	triaxial	triaxial	triaxial	triaxial
3 mm	triaxial	core	core	triaxial
4 mm	core	core	triaxial	triaxial
5 mm	core	triaxial	core	triaxial
6 mm	triaxial	top	triaxial	-
7 mm	triaxial	-	top	-
Coating system	A1 Sealer	PU 2K	A1 Sealer	A1 Sealer

## How do you process A1 Triaxial fibre?

A1, unlike polyester, does not absorb A1 Triaxial fibre but clamps it in between the different layers of A1, as it were. That's why our glass fabric has an open structure that allows the different layers of A1 to connect to each other and to clamp in the A1 Triaxial fibre.

The best time to start laminating over the top layer is when it is drying but still feels slightly moist. Immediately after the set time has expired.

The best result is achieved when the laminating layers are applied wet to wet. An advantage of A1 is that after a few days you can still apply A1 with A1 Triaxial fibre with a good adhesion. However, the substrate must first be coated with a wet layer of A1 before the A1 Triaxial fibre can be applied.



Even with larger surfaces it can happen that the A1 already reacts (is hard) before a new layer of A1 Triaxial fibre can be applied. This can be solved by applying a new thin layer of A1 or by slowing down the reaction time of the A1 using A1 Retarder.



To laminate, you have to work wet in wet. A quick way to apply A1 is with a brush or roller.



## Design values for mechanical properties

For the design with reinforced A1 composite products the following laminate properties for quasi-static loading are important:

- In-plane tensile properties (E-modulus and strength): in 0° and 90° direction.
- Bending properties (E-modulus and strength): in 0° and 90° direction.
- Interlaminar shear strength (ILSS) and interlaminar tensile strength.

For more information see our report: **Design guide A1 structures.**

Design values	Property and unit	0° direction	90° direction
In-plane tension	E-modulus, stiffness (MPa)	1228	215
	E-modulus, glob. stab. (MPa)	812	142
	E-modulus, loc. stab. (MPa)	625	105
Bending	Tensile strength (MPa)	29	7
	E-modulus, stiffness (MPa)	1363	477
	E-modulus, glob. stab. (MPa)	901	315
	E-modulus, loc. stab. (MPa)	693	233
Flexural strength (MPa)		11	6
ILSS	Shear strength (MPa)	1.50	
Transverse strength	Tensile strength (MPa)	0.27	

# 5. PIGMENTING OF A1

It is possible to colour A1 using our liquid A1 Pigments. Add up to 2% pigment to the weighed total amount of A1, or less, until the desired colour is reached.

## Assortment

The base colour of A1 is Ivory white. If desired, we have A1 suitable pigments in ten colours with which the A1 can be coloured through and through. These pigments are highly concentrated and are added up to a maximum of 2% to the A1. Often a lower dose is sufficient to achieve the desired result. The A1 Pigments can be mixed with each other so that almost all RAL colours can be made.



The following liquid pigments are available: white, yellow, orange, ochre, terracotta, magenta, red, blue, green and black.

## Constant colour

We advise to work with 1 batch of pigment to prevent colour differences as much as possible. It is also possible, especially if a constant colour is required for large projects, to provide all the necessary A1 Liquid with a colour pigment in advance. It is almost impossible to achieve a 100% equal colour for all products. That is why we advise you to make it clear that colour differences are possible.

## From ivory white to white

White is available in many colours and often one of the more difficult colours to realise. A few suggestions to achieve the desired white look are:

- use our A1 extra white version,
- A1 with max 2% white pigment,

- A1 Sealer white pigment and then apply in 1 or more layers. Finish with a non-pigmented A1 Sealer layer,
- a combination of the above possibilities.

It is possible to use pigments from other suppliers to colour A1. In some cases, these pigments can affect the quality of the A1, ranging from slowing down/blocking the curing process to decreasing the weather resistance. Hence our advice to test this in advance.

Dark colours absorb more heat than light colours. We also see this happening with dark coloured A1 objects. Although it does not affect the quality of the A1, these high temperatures can affect the materials and construction used in the A1 object.

## UV exposure

The present A1 pigments are UV stable for a considerable period. However also A1 with pigment will change colour due to the influence of the weather. How much is difficult to say as this depends on the intensity of the weather influence on the A1 object, the use of a sealer or coating system, the % of pigment used and the colour of the pigment.



Almost every colour from the RAL colour range can be made as a pigment on request.




Benches Stedelijk Museum - Amsterdam, The Netherlands - Be Concrete

## Concrete look

The best way to create a concrete look is to add black sand, A1 pigments and possibly some Fillite. This is a lightweight grey filler. Be careful with adding cement powder as the curing can slow down enormously and the cement powder may react to the A1 in the longer term. We recommend adding a maximum of 10% of cement powder to the total quantity of A1.



Fly-over panles - Amersfoort, The Netherlands - Be Concrete

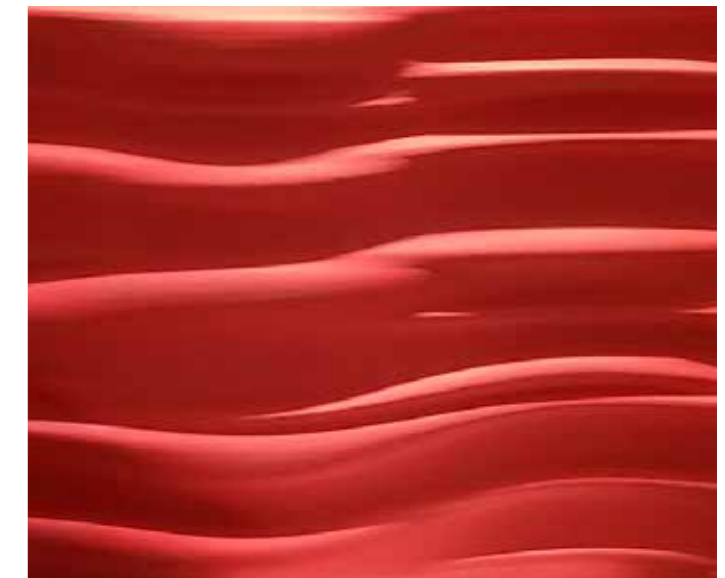

If red should really be red - Bulgaria - Rockwall Stone



Lampshade in different colours - High5



Pigment in combination with A1 Sealer

# 6. FILLERS

It is possible to add many other products to the A1 base material in addition to pigment and metal powders. This allows you to give the A1 a different look, change its properties and possibly save costs.

Frequently used materials are dried sand, very fine stones, marble powder, etc. Particle size is up to the customer's requirements but most common used is 0.1 - 2 mm. In addition to their aesthetic properties, these give the A1 a scratch-resistant and extra-hard top layer. By using sand of different colour and size, a granito or granite appearance can be obtained. In this case, after curing, the top layer can be sanded to bring the stone to the surface to obtain a greater contrast. Sand from the seaside is not suitable as it contains salts.

A special filler is expanded glass (Poraver), these are lightweight recycled glass balls. The main advantage is weight saving. For a good adhesion between the grains, it is possible to mix them beforehand with a limited quantity of A1.



Line Jenssen - iron powder

## Which fillers can I use to reduce costs?

Poraver (expanded glass) can be used as a filler for A1. This is a recycled lightweight glass ball note that allows you to achieve a large volume gain. Add the grains little by little to the A1 base.

Another good and inexpensive filler medium for A1 is dried (silver) sand. (available in the cement department in your local hardware store).

The choice of filler depends on your preference in terms of weight, desired appearance and cost.

## Adding fillers to the A1

First mix the A1 Liquid (1 part) with the A1 Powder (2 parts). Then gradually add the filler to the A1 (maximum 2 parts). Add A1 Diluent if desired.

We recommend adding a maximum of 0.67 kg fillers per kilogram of A1 created, whereby the ratio is 1 part A1 Liquid, 2 parts A1 Powder and 2 parts filler (all by weight).

A combination of fillers and/or pigments is also possible.



Sand



Marble dust



Metals



BeConcrete - yellow sand



Chopped fibres



Poraver



Granite



A1 ATP Powder



Expancell



Fillite



Poraver



Chopped fibres

## Examples materials mixed in A1

	Decorative	Light weight	Cost saving	Milling	Plaster	Putty
Sand	++	--	++	--	-	--
Marble dust	++	--	+	--	+	--
Metals	++	--	-	--	+	--
Granite	++	--	+	--	+	--
ATP Powder	--	-	+	+	++	++
Expancell	--	++	+	++	--	++
Fillite	++	+	+	+	+	+
Poraver	-	++	++	--	+	+
Chopped fibres	--	+	-	--	--	+



# 7. PROCESSING METHODS

There are a number of possibilities to process A1. These are casting, brush or roller application, use a spatula, spraying and finally rotational casting.

## CASTING

After mixing, A1 can easily be poured into the mould.

A number of techniques are available to prevent air bubbles on the surface:


- use the A1 High Shear mixer.
- start (if possible) BY brushing the mould, so that all unevenness/relief is touched with A1. The brush stripes disappear due to the fluidity of the material.

- the other A1 mass is poured along the edge so that the A1 can flow smoothly into it.
- you can fix any remaining air bubbles by tapping the side of the mould or by using a vibrating plate. If you have not created enough A1 for the mould, it is possible to add a new A1 layer within 1 hour.

Releasing the mould is often possible after 1 hour. For vulnerable objects, this period may be longer.



Pour part of the created A1 into the mould. Start (if possible) by brushing the mould, so that all unevenness/relief is touched with A1.

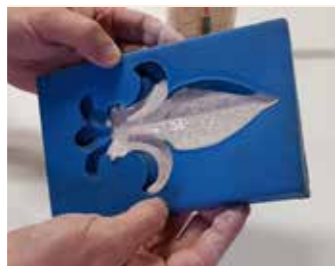

Carefully rotate the A1 in the mould.



Pour the desired amount of A1 into the mould and iron away the excess A1 with a putty knife.



Result after drying and unloading; a solid cast object, an exact copy of the mould.

## ROTATIONAL MOULDING

In a closed (silicone) mould, you can not only cast solid but also rotational. For this we have a special A1 rotation version available (A1 Rotation).

An important advantage of rotary casting is the weight saving, because only a limited amount of A1 is required compared to solid casting. The result is a lighter, but also directly a slightly more fragile object. When rotational moulding, you pour the A1 Rotation into the mould and then rotate it so that the entire inner wall of the mould is covered.



Phing Thing - Gert-Jan Vlaming

Rotate the object until the A1 starts to harden. You can check the moment of curing by checking the curing in the mixing cup. The hardening time of the A1 Rotation is around 30 - 40 minutes. The rotation can be done by hand or with a rotary machine. If desired, you can choose to have a 2<sup>nd</sup> or even 3<sup>rd</sup> layer of A1 by applying it through rotation.



Rotation machine

## BRUSH, ROLLER OR SPATULA

With a brush or coat roller the A1 can be applied in a thin layer. This is particularly suitable for the application of a 1<sup>st</sup> layer A1, the so-called gelcoat layer or for laminating glass fabric such as A1 Triaxial fibre.

The brush or roller can be cleaned afterwards with water. A spatula is suitable to obtain a smooth finish. For this we advise to thicken the A1 with A1 Thix A or A1 ATP Powder.



Brush



Roller



Spatula

## SPRAYING

A1 is easy to spray. This makes it possible to apply a thin layer of A1. This technique is ideally suited for working with a (silicone) mould, but also for applying A1 on, for example, a form made of EPS (Expanded Polystyrene).



Spraying cup

Putzmeister



Spraying with chopped fibres



## 8. MOULDS

A1 is excellent to process in a mould so that exact copies of the original can be obtained. It is possible to use a mould of different materials such as: silicone, concrete complex, PU, polyester, etc.

It is important that no adhesion can take place between the mould and the A1. Silicone rubbers are excellently suited for this purpose and therefore we also recommend working with moulds made of silicone rubber.

A silicone mould has a number of other advantages, such as:

- flexibility of the mould is very useful when unloading the A1 object.
- Because A1 does not shrink but has a small expansion during the reaction process between the A1 Liquid and the A1 Powder, an exact (detailed) impression of the silicone mould is created.
- A1 does not affect the silicone. This makes it possible to create an infinite number of A1 prints.



Silicon rubber

A silicone mould may be less suitable for dimensionally stable products. In addition, poor quality silicones (often cheap) with a high fat content can give off, which is sometimes visible on the A1 object.

Moulds made of sheet material such as epoxy plywood forms or polyester moulds work well in practice if provided with a suitable release agent. During hardening, A1 expands slightly. This can cause A1 to get stuck in the mould, especially when it is not self-discharging. Moulds made of




CNC

gypsum or other porous materials are not recommended unless they have a fully sealing coating or washing system that prevents moisture from the A1 from penetrating into the mould. There is a risk of a (strong) bond between the mould and the A1 and a weakening of the A1 object.

When using a release agent, (limited) release agent may remain on the A1 object after release. Often these release agents are based on fat/oil. This can affect the adhesion of even finishing coats such as A1 Sealer, paint system or an extra layer A1.

Therefore, we advise to limit the use of release agents as much as possible or to work with mould materials that do not bond with A1.

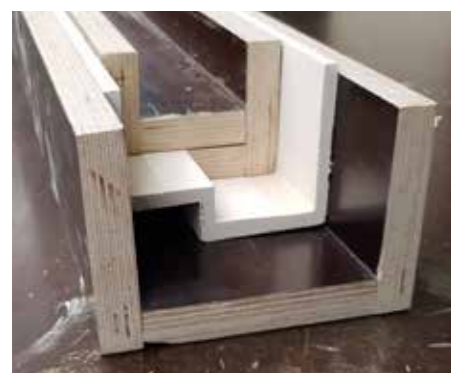

Plywood



Glass fibre reinforced Polyester



Coated EPS/Polystyrol

## 9. LAMINATING IN A MOULD

The use of a mould in combination with A1 Triaxial fibre gives the possibility to make strong and light-weight A1 objects.



When we start lamination we first apply a 1<sup>st</sup> layer A1, possibly thickened with Thix A, often with pigment, sand, metal powder

and/or other materials to achieve the desired appearance. Before we start laminating it is important to let this layer dry (maximum 1 hour), to prevent the A1 Triaxial fibre from pressing through.

After applying the top or 1<sup>st</sup> layer in a mould, the time has come to continue applying the next (glass fabric reinforced) layers A1, when the top layer is already drying but still feels slightly moist. This moment is immediately after the set time of A1 has expired and is also dependent on ambient temperature, humidity and the use of A1 additives. This way you get a good adhesion between the different layers.

Cut the A1 Triaxial fibre to size in advance and create a new quantity of A1. You now apply the un-thickened A1 to the A1 top layer. Now you can laminate the A1 Triaxial fibre in it. Your brush from inside to outside to prevent any folds. No intermediate drying time is required to apply multiple layers of A1 Triaxial fibre.

If the underlying A1 layer is cured, a thin layer of A1 must be re-applied before the new A1 layer can be laminated with Triaxial fibre (wet in wet work).



### Temperature and humidity

Temperature and humidity affect set time and curing of A1. For larger objects A1 Retarder can be used to extend the set time so that there is more time to work on the A1 object quietly. Provided the processing temperature is not too high and the air humidity is not too low, this is a good way of working.

The use of A1 Retarder for the application of the top layer (gelcoat layer) and in particular when working in moulds, we advise against it in hot weather (above 25 °C – 30 °C), in combination with low humidity. In hot and dry weather, a dry layer will quickly form on the surface, even before the curing process begins. The curing process seems to begin but the underlay is still soft. The risk of craquelure formation in the top layer and poor curing is therefore high. In addition, the adhesion to other A1 layers will be weaker. If possible, try to avoid working in conditions above 25 °C. An alternative is to add A1 Accelerator which will shorten the set time of A1.

Releasing the mould is often possible after 1 hour. For vulnerable objects, this period may be longer.

We advise that you apply at least 2 layers of A1 Triaxial fibre. From 4 layers of A1 Triaxial fibre onwards, it is proofed against vandalism. For fixing or capturing vulnerabilities, even 6 to 8 layers or more can be used.

# 10. LAMINATING OF AN OBJECT

A1 adheres excellently to EPS (Expanded Polystyrene) and is therefore a frequently used combination. Objects, for example made from modeling foam, can also be covered with A1.

To finish the object smoothly, a layer A1 mixed with A1 Thix A or A1 ATP Powder can be applied. When the A1 is just dry, the surface can be rubbed flat with a slightly damp sponge. After complete curing, the object can be sanded.



Studio Maky

## EPS glued with A1

2 parts of EPS can be glued together using A1. A1 acts as an adhesive in this instance. Lubricate two pieces of EPS with A1, one on top of the other. After about 60 minutes the parts are fused together.

## EPS coated with a layer of A1

You can easily apply a layer of A1 to the EPS by brushing, spraying, rolling

or filling it. Sometimes, it is necessary to thicken the A1 with A1 Thix A or A1 ATP Powder.

The strength of the A1 top layer also depends on the thickness of the A1 layer and the density of the EPS. To create a strong top layer, we recommend using 1 or more layers of A1 Triaxial fibre.

## EPS coated with a layer of A1, reinforced with A1 Triaxial fibre

Brush EPS with A1. Secure the A1 Triaxial fibre in the still wet layer of A1. The A1 Triaxial fibre provides the strength to A1. The advice is to process at least 2 layers of A1 Triaxial fibre. From 4 layers of A1 Triaxial fibre onwards, it is proofed against vandalism.

Before applying the A1 Triaxial fibre, it is useful to cut it to size first, given the processing time of A1.



Before applying the A1 Triaxial fibre, cut it to size first, given the processing time of A1.

Because you work over an EPS form, the first layer will be the inner layer and will not be visible later. Very important is that the A1 Triaxial fibre is completely soaked with A1 in each layer before you apply the next layer of A1 Triaxial fibre. This is because dry on dry provides air inclusion and consequently a vulnerable spot in the object.


## Sawing through a form

A1 has a processing time of about 20 - 25 minutes, after that the material is dry but still vulnerable. The complete curing takes place on average after 7 to 30 days depending on the thickness of the object. The advice to be

able to saw and/or drill A1 properly is about a week. You can use any sawing machine for this. Of course there is a difference in quality and skill of the machine. A water saw table or a dremel often give a nice result.

## Examples amount material (mm/m<sup>2</sup>)

per mm/m <sup>2</sup>	Top layer Thix	Top layer Sand	Laminate Standard	Laminate Sand
A1 Liquid	600	400	600	475
A1 Powder	1200	800	1200	950
Sand 0,2 - 2 mm		800		475
Thix A	36	-	-	-
<b>Totaal</b>	<b>1,836 kg</b>	<b>2,000 kg</b>	<b>1,800 kg</b>	<b>1,900 kg</b>

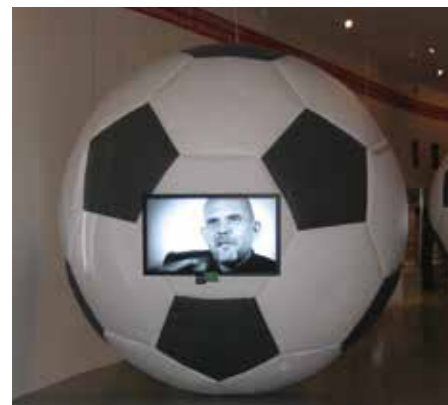

Kim De Ruyscher



Jurriaan van Hall - Karel Goudsbloem

## PUR/PIR FOAM

Although A1 on PUR/PIR adheres very well we advise to avoid the use of these foam systems. EPS can do the job with less risks compared to PUR/PIR. PUR/PIR is easier to shape by hand but that is probably the only advantage compared to EPS. Less risks, better water resistance and pricewise EPS is a better solution. Thermal expansion is more less the same as we see with EPS but the form stability and possible after-foaming caused by moisture is an problem with PUR/PIR. This has to do with the way of producing these systems. Also, the use of PUR foam to fill up a product made of A1 is not to be advised as well. The chemicals inside the PUR foam can have a negative influence on the A1 and the unpredictable foaming with high pressures can cause cracking as well. Even when using 3 or 4 layers of A1 Triaxial fibre.

# 11. SUPPORT MOULDS

A1 is very suitable for making a very strong and also lightweight support moulds, by laminating A1 in combination with A1 Triaxial fibre.



Baltas Angelos



Richard van der Koppel



1 Stabilize the silicone mould before starting to make the first support mould.



2 Cut the A1 Triaxial fibre into various sizes, enough for 4 layers.



3 Set up A1 Liquid and A1 Powder (1:2) in weight.



4 Gently add the A1 Powder to the A1 Liquid. Stir the mixer till all lumps have disappeared ( $\pm$  1 min.) resulting in a smooth material.



5 Apply A1 with a brush on the silicone mould.



6 Add the A1 Triaxial fibre on the wet A1. Continue until the entire silicone mould is covered with A1 and a layer of A1 Triaxial fibre.



7 Again add a layer of A1...



8 ...and apply a 2<sup>nd</sup> layer of A1 Triaxial fibre on the still wet A1.



9 Press the A1 Triaxial fibre. The fibre can be formed/shaped well.



10 Brush this layer again with A1. Repeat until you have applied 4 layers of A1 Triaxial fibre.



11 Let the A1 support mould dry for 60 minutes.



12 If desired, the A1 support mould can be finished with a multitool.




13 If needed, holes can be drilled in the A1 support mould to add bolts and nuts.




14 The A1 support mould is ready for use.

Scan the QR code and watch the video:



Scan me

How to make a support mould



Scan me

A1 support mould with chopped fibres

# 12. SMOOTH FINISH OF A1

There are 3 techniques to finish A1 smooth:

## A1 Thix A

Add A1 Thix A to the A1 to thicken the A1 into a paste. Apply the thickened A1 paste with a spatula or putty tool. This creates a layer that you can finish within 1 hour with a slightly damp sponge for a smooth result. After drying you can work on the A1 object with waterproof abrasive pads or waterproof sandpaper.



## A1 ATP Powder

A1 ATP Powder is a volume thickener. This allows the A1 to be thickened to filler thickness. Thicken the A1 with ATP Powder; with this A1 can be thickened to filler thickness. The ATP Powder can be added indefinitely, until the desired thickness is reached. This does, however, result in a less strong product when a large amount of ATP Powder is added. ATP Powder can only be used for indoor applications.

The application of A1 with ATP Powder goes well with for example spatula, palette, putty knife etc.

You can still work the A1 within an hour with a damp sponge for an even smoother result. After drying you can if desired with waterproof abrasive pads or waterproof sandpaper further refine to an even smoother whole.

## C-veil

C-veil is a thin glass fleece finish. Apply C-veil to the still damp last layer A1. If the A1 is dry, first coat it with a layer of A1. The C-veil is very easy to tear, small pieces are easy to press, so you can achieve a nice smooth and seamless result. If desired, a second layer with C-veil can be applied. Like the A1 Triaxial fibre, the C-veil **cannot** be sanded.

### Smooth finish with Thix A using a brush, roller, spatula, squeegee, sponge, sanding paper or machine



1 Creating a smooth finish on the object. First weigh 1 part A1 Liquid and 2 parts A1 Powder.



2 Add 2% Thix A (of the total quantity A1) to the A1 Liquid. By using Thix A the A1 will result in a thicker texture.



3 Mix the A1 Liquid, Thix A and A1 Powder resulting in a smooth material.



4 The A1 can be applied with a: brush, roller, spatula or squeegee.



5 Result is a smooth finish.



6 Result is a smooth finish.



7 Or use (after ±20 minutes) a damp sponge or a waterproof sanding pad.



8 Or by using sanding paper manually or by machine.



9 Resulting in an even more smooth finish.

### Smooth finish with C-veil



1 Creating a smooth finish on the object. First weigh 1 part A1 Liquid and 2 parts A1 Powder and mix until all lumps have disappeared.



2 Tear off a piece of C-veil (use gloves).



3 Apply a thin layer of A1 on the surface.



4 Press the small pieces of C-veil into the A1. Overlay the pieces of C-veil.



5 The C-veil must be covered with a layer of A1 by hand or brush.



6 For a more smooth finish you can add a second layer of C-veil.


### Smooth finish with ATP powder



1 Creating a smooth finish on the object. First weigh 1 part A1 Liquid and 2 parts A1 Powder and mix until all lumps have disappeared. Set up the ATP powder.



2 Add as much ATP powder as needed into the A1. Stir firmly till all lumps have disappeared. The A1 texture can be made as a paste or as a putty.

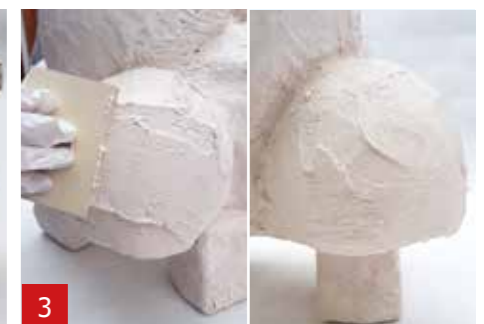

3 Resulting in a smooth finish. For an even more smooth finish (after ± 20 min.) use the sanding techniques.

# 13. METAL POWDERS

For metal effects, various metal powders can be added to A1. After making the A1, it is possible to add up to 2/3 in weight to metal powders, such as bronze, iron and copper powder.

**For example:** It is possible to add up to 0.8 kg of metal powder to 1.2 kg of A1. Of course, less is also possible.

After curing of A1, which is provided with a metal powder, you can process it in different ways for the desired result;

- A1 sand lightly so that the metal powders come to the surface, these metal particles can be processed with oxidizing substances.
- A1 can be patinated hot or cold, use a low power burner when hot because only the metal parts need to be heated.
- Possible hot oxidizing patinas are copper sulphate and iron nitrate. Possible cold oxidizing patinas are sulphur liver, ammonia and vinegar.
- It is also possible to pigment the A1 so that the undertone is already in the desired colour scheme. E.g., with the patina sulphur liver (for dark bronze) the A1 can be pigmented with black pigment.



There are many possibilities in patinating and colour appearance. When using metal powder, the end result will vary. This has to do with oxidation. This depends on the chosen patina (hot or cold), the location of the metal particles in the A1 and the sub-colour with which the A1 is pigmented. The oxidation itself is an uncontrollable process and this will give every object a different appearance.

**Tips:**

- after the desired result of the metal powders A1 Sealer Matt or A1 Sealer Satin can be applied for protection so that the weather influences slow down the oxidation process.
- the oxidation of the iron powder can be stopped by using water with the addition of soda.
- if you work with a silicone mould, you can stimulate the oxidation process by extending the discharge time by a number of hours or days.



Ivars Drulle - iron powder



Emiel Abé - bronze powder



Stan Hill - iron powder en pigment



Marja Venhuizen - iron powder en pigment



Conny Paap - bronze and iron powder



Bronze and iron powder



Nadia Gonegai - bronze powder

# 14. A1 IN AN OUTDOOR ENVIRONMENT



## FIRE

A1 has good to excellent fire resistance properties and can be used for projects with high fire resistance requirements. We have tested A1 in accordance with EN 13501-1 and ASTM E84-15b.

### European classification

Classification of reaction to fire performance in accordance with EN 13501-1:2002. A1 (Acrylic One) LP01 and A1 Tri-axial Fabric:

**B-s1,d0**

Its reaction to fire behavior is classified : B  
The classification to smoke production is : s1  
The classification to flaming droplets / particles is : d0

Class	Performance description	Fire scenario and heat attack	Examples of products
A1	No contribution to fire	Fully developed fire in a room At least 60 kW/m <sup>2</sup>	Products of natural stone, concrete, bricks, ceramic, glass, steel and many metallic products
A2	"	"	Products similar to those of class A1, including small amounts of organic compounds
B	Very limited contribution to fire	Single burning item in a room 40 kW/m <sup>2</sup> on a limited area	Gypsum boards with different (thin) surface linings Fire retardant wood products
C	Limited contribution to fire	"	Phenolic foam, gypsum boards with different surface linings (thicker than in class B)
D	Acceptable contribution to fire	"	Wood products with thickness ≥ about 10 mm and density ≥ about 400 kg/m <sup>3</sup> (depending on end use)
E	"	Small flame attack Flame height of 20 mm	Low density fibreboard, plastic based insulation products
F	No performance requirements	"	Products not tested (no requirements)

Classification of reaction to fire performance in accordance with EN 13501-1:2007+A1:2009. A1 LP01 and A1 Tri-axial Fabric + sand (25% of mass A1):

**A2 - s1,d0**

### USA fire rating

Evaluation of the surface burning characteristics of a material identified as A1 in accordance with ASTM E84-15b, standard test method for surface burning characteristics of building materials.

Flame Spread Index (FSI) : 20  
Smoke Development Index (SDI) : 15

#### Test Criteria.

Classification	Flame Spread Index	Smoke Developed Index
A	0 – 25	0 – 450
B	26 – 75	0 – 450
C	76 – 200	0 – 450



## UV

UV has a strong influence on the durability of materials. 20+ year old A1 project in South Africa show that (coated) A1 will withstand UV influence.

When an uncoated A1 object is exposed to (intensive) UV the very thin top layer of the A1 object will be affected (erosion) within a few months. This will mainly be noticeable by a change of the colour of the A1 object. After this initial period the erosion by UV will continue but at a very slow rate.

Adding sand to the A1 object (1 part A1 Liquid, 2 parts A1 Powder and 2 parts Quartz sand) will still result in an initial erosion of a very thin top layer but after this the added sand will almost stop the erosion process of the A1 object caused by UV.

For the best protection we advise to apply layers of A1 Sealer (PLUS) to the A1 object as this layer will act as a barrier between the UV radiation and the A1. As the A1 Sealer (PLUS) will now be affected by the UV we advise to apply a new layers of A1 Sealer every 3 years and of A1 Sealer PLUS every 6 years. Other coating systems can be used as well if they are damp open (KEIM Soldalan) or the A1 object can release its moist at the backside of the A1 objects (for ventilated Cladding systems).

**Question:** We would like to use A1 in an aqua parc and the A1 elements will frequently be exposed to water.

If the A1 object is constructed in such a way that the splash water can easily drain off and in combination with a good coating, we do not expect any problems. In places where the splash water can collect, we advise not to use A1.

### Façade Nijmegen


The façade panels are placed close to ground level. This is possible as the A1 panels will release possible rainwater at a very high rate. Furthermore, these panels are coated with A1 sealer which protects the A1 façade.



## WATER


Similar to many other materials, A1 will attract moist/water at a humidity rate above 90%. As can be seen in graph 1 it will take several weeks at very high humidity level to reach the maximum levels of 10 to 11% water absorption. If we add sand to the A1 (1 part A1 Liquid, 2 parts A1 Powder and 2 parts Quartz Sand) the water absorption is significant lower.

Graph 1: 90% to 95% humidity at room temperature

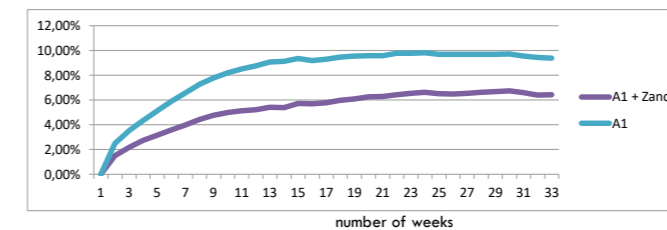

An A1 object will release its water when placed in an environment with a lower humidity (below 70%) at a high speed as can be seen in graph 2. It only takes a few days to reach the levels at starting point.

Graph 2

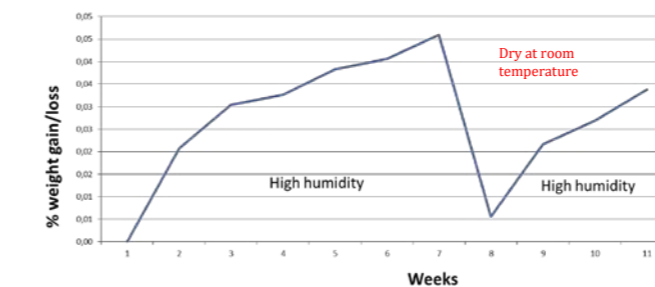

Exposure of an A1 object to very high humidity environment is possible for several months without affecting the A1 object. The use of an A1 Sealer or coating system will extent this period as it acts as a barrier between the humidity and the A1 object.

### Bath Bunny

This A1 object with an polystyrene core is floating in the Rotterdam waters for several years now. The layer of A1 coated onto the polystyrene core is in good conditions excluding the layer of A1 which is fully submerged under water, which has dissolved in the water. The layer of A1 which is directly at the waterline is still fine as it does absorb water in rough conditions but has the opportunity to release this water when exposed to air.



We have also tested A1 objects fully submerge under water and tested the quality of the top layer with the use of a Shore measurement (picture 1 and 2). Based on these tests an A1 object can be fully submerged under water for a period of 2 months without weakening the top layer. After this period the top layer weakens and the A1 will slowly dissolves in the water.



Picture 1



Picture 2

Equilibrium moisture content at different Relative Humidity Levels		
20°C	20% RH	0,06%
20°C	65% RH	0,50%
20°C	85% RH	1,20%
20°C	95% RH	11,00%

**Question:** Can we use A1 to build a fish pond?  
We do not advise you to use A1 because A1 cannot stand permanently under water fo a long period, as A1 is vapour permeable.

**Question:** We would like to use A1 to make a soap holder. Be carefull as the soap might react with the A1 or more likely the continuous water beneath the soap which is entrapped between the soap and the A1 soap holder will affect the A1.

### Totem pole

This totem pole placed in a swimming pool is at the top made of A1 with a foam core. The lower part (50 cm) is made of polyester.



**A1**  
**GRP**

# 15. REINFORCEMENT STRUCTURE

For projects in A1 it can be essential to provide the object with a reinforcement construction. This depends on the size, use and application of the object. It is possible to reinforce the object with numerous materials including EPS, wood, stainless steel and aluminium. The use of these materials should always be carefully considered. We do not recommend laminating wood into objects for outdoor use. This also applies to use in damp rooms. Aluminium has many advantages over wood and is therefore recommended in these situations.



Construction inside panel Mahler - The Netherlands



Panels Protea building - South Africa

To attach reinforcement materials, simple gluing can be used by laminating with A1 and Triaxial fibre. It is also possible to glue materials with bonding products. Observe the manufacturer's instructions. Excellent adhesives include MS polymer sealants.

Other influences that should be taken into account are thermal and weather influences.

In addition, influences that may vary per location, such as wind load, are important to take into account.



V&D building Kalverstraat - The Netherlands



*A1 has a good adhesion to materials such as wood and iron and is therefore an ideal combination in many situations. A major disadvantage of wood and iron is that both materials react to moisture. Wood will absorb moisture and expand. We see the same process with iron, which oxidises in contact with moisture.*


A1 is a water-borne material and a small amount of residual moisture will also be present in the A1 object after curing. In addition, A1 absorbs (to a limited extent) moisture in a humid environment, which can come into contact with the wood or iron. The reaction of the wood or iron to the moisture (expansion) can have consequences for the A1 in the form of markings and possible tearing of the A1.

A1 is often used as covering material for many different types of materials including EPS, plaster, gauze and many other foams/materials. In itself, this is perfectly applicable, but a number of factors must be taken into account. Especially when using A1 over materials that are themselves very sensitive to moisture such as plaster, you should take into account blistering, drawing through of moisture spots or other problems. In outdoor applications, these materials are not recommended. In indoor applications, it is fine if triaxial tissue is also used, which reduces the risk of swamp cracks. It is advisable to use at least one layer of triaxial tissue in

Material	Coefficient of thermal expansion (in 10 <sup>-6</sup> / °C)
A1 laminate	5
Glass (window plate glass)	8
Concrete	12
Steel	12
Aluminium	23
Polyester laminate (glass mat)	24
PVC	80
HDPE	200

almost all applications. Due to the differences in thermal expansion of the materials, crack formation can easily occur without reinforcement. This is usually done by a greater thermal expansion of the materials compared to A1. A1 can absorb this but the thinner the A1 layer the greater the risk.

EPS, galvanised iron, stainless iron and aluminium will not react or react less to the moisture present and are therefore better alternatives. However, we do recommend taking into account the differences in thermal expansion when changing temperatures of the different materials.

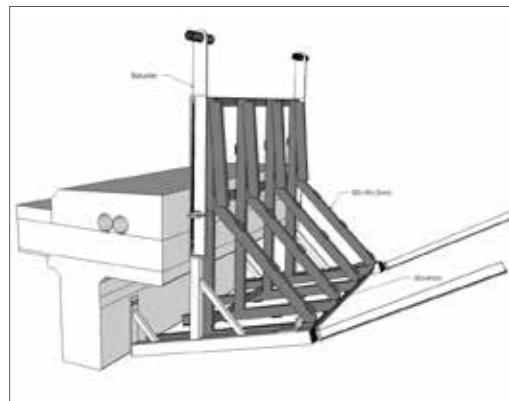

Construction inside panel fly-over - The Netherlands





# 16. A1 SEALER

A1 Sealer and A1 Sealer PLUS are water-borne coating systems to protect the A1 object from weather influences such as moisture and UV radiation.

All objects in an outdoor environment subject to weather influences that have an erosive effect on the A1 object. Our A1 Sealer (PLUS) has a protective effect against these influences.

There is a choice of A1 Sealer (PLUS) Matt and A1 Sealer (PLUS) Satin. For the most matte result we recommend first applying a layer with the A1 Sealer (PLUS) Satin and then a layer with A1 Sealer (PLUS) Matt.

**The advantages are:** 1 component, solvent-free, water-based, quick-drying, easy to apply, good UV resistance, excellent adhesion, protection against dirt absorption and good protection against moisture.

### Data:

- **Min processing temperature:** 10°C
- **Average consumption:** 8-10 m<sup>2</sup> per litre
- **Storage life:** 1 year in closed package
- **Storage:** Store frost-free and out of direct sunlight

### Application of A1 Sealer (PLUS)

1. The surface to be sealed must be free of wax, oil, dirt or dust.
2. Apply with a brush, roller, or by spray.
3. If the A1 Sealer (PLUS) is applied with a brush, we recommend adding 30% water. When spraying, we recommend adding 50% water.
4. After application, the A1 Sealer (PLUS) should be rubbed out with a dry cloth when it is still damp. When spraying the A1 Sealer (PLUS) it is not necessary to polish the A1 Sealer (PLUS).



A1 Sealer Matt



A1 Sealer Satin



A1 Sealer PLUS Matt



A1 Sealer PLUS Satin

5. Each layer has a drying time of 15 to 45 minutes, which also depends on temperature and humidity.
6. A1 Sealer (PLUS) may be applied in 1 to a maximum of 3 layers to improve the protective properties.

The A1 Sealer (PLUS) is a so-called breathable coating. In addition to any residual moisture after production, A1 absorbs water to a limited extent if placed in a highly humid environment and this water is also (many times faster) released again in a dry environ-

ment. With the help of this breathable (vapour open) Sealer A1 can easily leave the A1 object with any remaining and/or absorbed moisture. Therefore, avoid applying too thick a layer of A1 Sealer as this may close the A1 object.

The consumption of the A1 Sealer (PLUS) per kg applied by brush is 8 to 10 m<sup>2</sup>. The consumption for spraying the A1 Sealer (PLUS) per kg is 10 to 12 m<sup>2</sup>.

### Patinate with A1 Sealer (PLUS)

A1 can also be patinated by adding Satin pigment to the A1 Sealer (PLUS). By applying it with a brush, cloth or syringe you can achieve different effects. It is also possible to use different colours on top of each other.

We recommend using an unpigmented layer A1 Sealer (PLUS) as the last layer, with the choice of A1 Sealer (PLUS) Satin or A1 Sealer (PLUS) Matt.



### Waterproof

**Question:** The A1 objects lie in the grass. They all had at least 2 layers A1 Sealer. Today I turned the long and the short object. The bottom has turned brown! The A1 Sealer makes them waterproof, right?

**Answer:** The A1 Sealer is not waterproof, but breathable. The brown colour is probably caused by the moisture in the soil. Two layers of A1 Sealer is usually sufficient, but with prolonged moisture loading, which is the case here, there is a risk of discolouration.

### Lifespan

We recommend applying the A1 Sealer every 3 years and the A1 Sealer PLUS every 6 years. Furthermore, we recommend that you check the A1 object annually for possible damage to the A1 Sealer (PLUS) so that it can be repaired immediately. This inspection is also a good opportunity to clean the A1 object if necessary.



# 17. COATINGS (FOR OUTDOOR USE)

For outdoor use you can choose several coating systems. Most common systems are: A1 Sealer, 2K PU, Keim or other exterior wall paints.

## A1 Sealer (PLUS)

A1 Sealer (PLUS) is the most common one-component sealer to protect A1 products for outside use. It is easy to apply in one or more layers. The more A1 Sealer (PLUS) you apply the more gloss will appear. It also can be used as a base resin for patina to decorate and give products a natural look. Advantages of the sealer: one component, solvent free, easy to apply, good UV resistant, protection against dirt pick up, quick drying, excellent adhesion and good humidity protection.

By our users also other coatings and sealers are used to enhance and/or protect the desired aesthetic properties (aesthetic and performance) of the A1 objects upon which they are applied. Below, you will find a list of several coatings/sealers that (appears to) work well with A1. Information is based on projects from the past and achieved results after aging in Weathering/UV cabinets. Depending on climate in different parts of the world, the lifespan and maintenance time of the different Coating systems can vary.

## Exterior wall paints

Exterior Wall Paints are available in a variety of brands and formulations., all with their specific features. Keim Soldalit is a Multi-purpose, silicate exterior paint on a sol silicate binder basis (combination of silica sol and water glass) for organic, mineral and mixed substrates. KEIM Soldalit is water-repellent, highly water vapour permeable, lightfast, UV-stable, extremely resistant to weathering with minimal soiling tendency.

## 2K Polyurethane coatings

2K Polyurethane coatings are available in a variety of brands, formulations and qualities. Baril 269 Poluran Clear Coat 75 is a high-quality coating with excellent adhesion on A1 composite products. This Semi-Gloss transparent coating is easy to apply and has a high abrasion and chemical, high mechanical and impact resistance. The good flexibility and weathering/UV resistant results in a long-lasting protection of products made of A1. Be aware that 2K coatings are NOT vapour permeable, which could create water entrapment, if the A1 application is also closed on the back and not fully cured.

## Acrylic paint, oil paint or lacquer

For indoor use, the A1 object can be finished with an acrylic paint, oil paint or lacquer, provided that the adhesion of the paint has been tested beforehand.

If you choose such a paint and final lacquer (matt or high gloss), we recommend, in addition to testing, to observe the following points:

- make the object inside,
- dry and cure the object completely,
- after about a week to paint (drying time on the advice of the paint supplier),
- then varnish (drying time on the advice of the supplier),
- an A1 Sealer is not necessary then.

For outdoor applications, such coating systems can interfere with the breathability of A1, which can lead to flaking of the coating layer.



Façade panels - Doetinchem, The Netherlands - Baril coating



Kramer Kunstwerken - Anti-graffiti coating



Kool - Ahoy Rotterdam - 2K epoxy coating

# 18. A1 FAÇADES

A1 has a number of important advantages in the manufacture of lightweight façades.

## Appearance

A façade provides information about the function of the building and presents itself through its appearance. With A1 an almost infinite number of (natural) radiations and colours can be achieved by adding (natural) filling materials. By using (silicone) moulds almost every structure can be reproduced.

## Processing

A1 is water-based and contains no harmful substances. This makes it a safe material to work with. Also, there

are no expensive investments in equipment needed to be able to use A1. This means that A1 can be used in almost all types of production environments, provided that they have a proper heat and moisture balance.

## Freedom of form

Because after mixing the A1 Liquid with the A1 Powder the A1 has a liquid form, almost any form can be created. This creates interesting opportunities for designers who are looking for special forms in their design.

## Lightweight

By using our A1 Triaxial glass fibre, it is possible to create thin and lightweight panels/objects with a thickness of approx. 6 mm and a weight of ca 12 kg/m². This makes A1 panels applicable where other materials become true. This also simplifies the installation of the panels.

## Renovations

Because of the above advantages, A1 is very suitable for the renovation of buildings where the original radiations must be preserved, but without using these building materials.

## Substitute for natural stone and brick

Natural stone and brick are traditionally the materials for load-bearing walls and columns. A1 can serve as a good alternative to these materials. Natural stone is precious, and its strength varies considerably. Brick as a load-bearing material has declined sharply in recent decades. With the introduction of the cavity wall, solid brick exterior walls can be replaced by thin A1 wall panels with a brick look.



## Substitute for wood

Wood is a widely used material for façades and decoration. Panels made of A1 not only have the appearance of wood but also meet the highest fire requirements.



## Substitute for metal

Various metal powders are added to A1, allowing different metal radiations to be achieved, such as bronze, iron, buying and zinc. For A1 façades, we only add these metal powders in the top layer, so that we achieve the desired appearance with little metal.



## Substitute for concrete

Decorative elements are often executed in a concrete appearance. By adding pigments and fillers it is possible to achieve a large number of different concrete radiations with A1, but in panels with enormous weight savings.



## A1 Extended starter kit

is the way to get acquainted with A1. This kit consists of a selection of the most popular additives and filling materials with which it is possible to extensively explore the possibilities of A1 itself.



### Inhoud:

- 2,5 kg A1 Liquid
- 5 kg A1 Powder
- 5 m<sup>2</sup> A1 Triaxial fibre
- 1 m<sup>2</sup> C-veil
- 0,25 kg A1 Retarder
- 0,25 kg A1 Thixtrope A
- 0,25 kg A1 Sealer
- 0,25 kg Iron powder
- 0,25 kg Black pigment
- 1 kg A1 ATP Powder
- 30 mm High Shear Mixer
- 1 kg filler sand

## Workshops

During our 'Introduction to A1' workshop you will be introduced to the possibilities of this special product. During this 3-hour workshop we will demonstrate laminating and casting with A1.

### Subjects:

- mixing A1
- different A1 additives
- A1 reinforcement materials
- the use of filler material
- A1 on EPS (polystyrene)
- working with silicone moulds

There is also plenty of room for asking questions and you will be given the opportunity to start working with A1 yourself. Afterwards, all participants receive a basic or extended starter set (to be specified when ordering) to be able to continue practising independently.

## Webshop

For the complete range of A1 look at our international webshop: [www.shop.acrylicone.nl](http://www.shop.acrylicone.nl)

**Website:** [www.activecomposites.com](http://www.activecomposites.com) with lots of previews and information about working with A1. You can also find our sales outlets here.


**Facebook en Instagram:** for an overview of the most recent A1 projects.

**Facebook:** [www.facebook.com/AcrylicOne](http://www.facebook.com/AcrylicOne)

**Instagram:** @acrylic\_one

## Vragen:

Our team of A1 specialists remain at your disposal if you were to have any additional questions Send your questions to [info@acrylicone.com](mailto:info@acrylicone.com). Do you want to contact us in person? Call us at **+31 187 663006** during office hours.

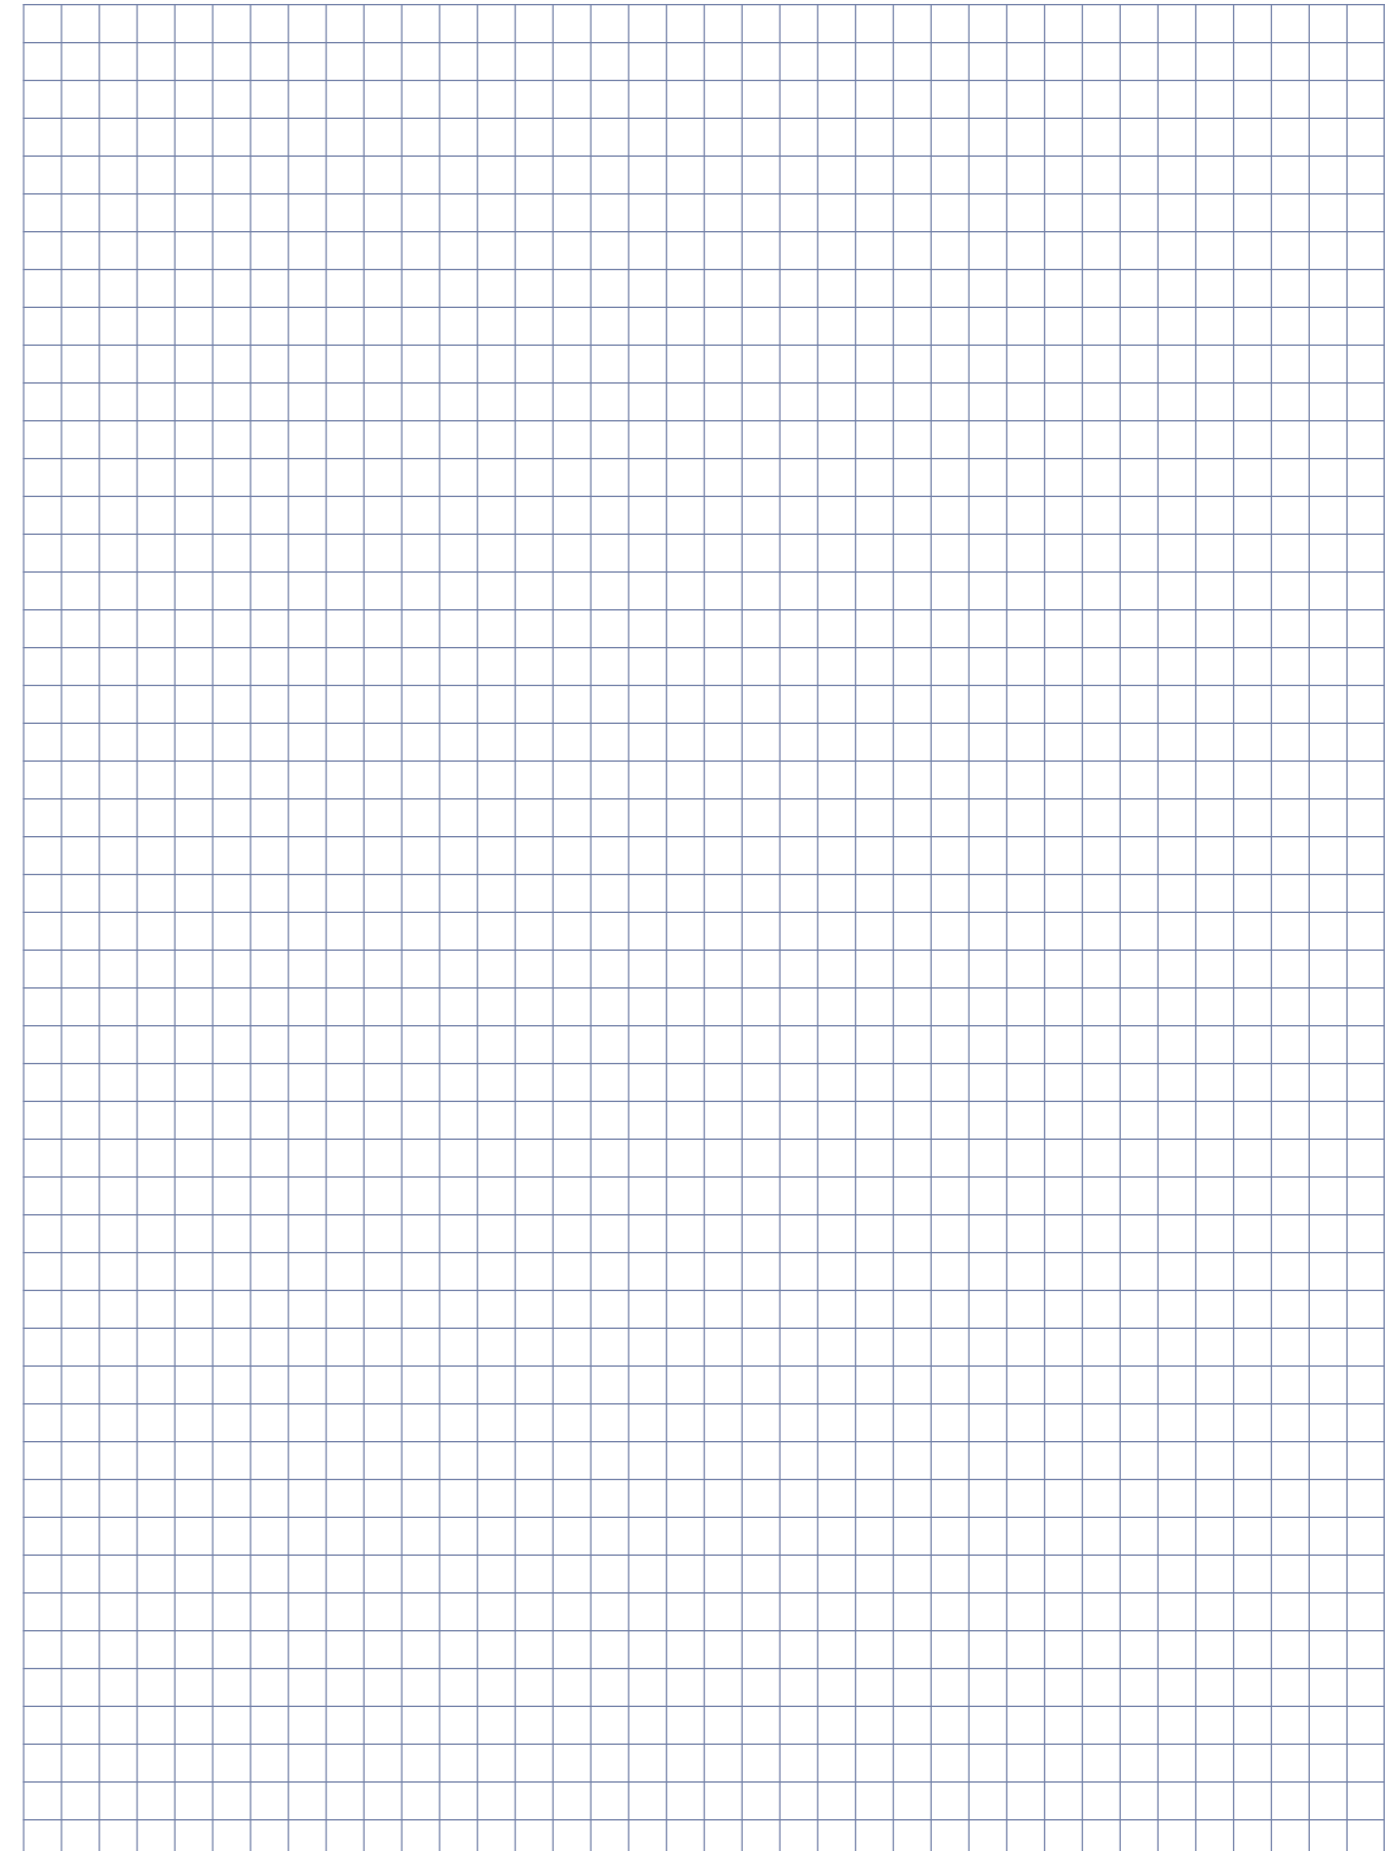





The information in this user manual is considered accurate. The user needs to ascertain the suitability of the product for the application the user wishes to apply.

When in doubt, the user needs to carry out tests to ascertain the suitability of the product.



Nijverheidsweg 15A | 3251 LP Stellendam | The Netherlands  
**T:** +31-187-663006 | **M:** +31-6-51612714  
**E-mail:** [info@activecomposite.com](mailto:info@activecomposite.com) | **W:** [www.activecomposite.com](http://www.activecomposite.com)